

 
## Speedy Dialer Hardware Installation



**Important: Before connecting the Speedy Dialer hardware, you must install the software CD.**

### Telephone Cable Connection:

- A.** On the back of the *Speedy Dialer*, plug one end of the Telephone Cable into the jack labeled "Phone Line".  
**B.** Plug the other end of the Telephone Cable into a standard telephone wall outlet.

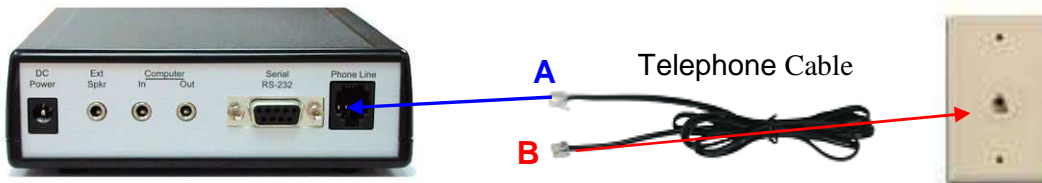


### 2: **A. USB and/or Serial Cable Connection - 2 Alternatives:**

Alternative A: If you received a Serial cable plus an 18" short USB adapter cable, connect the male end of the Serial cable to the *Speedy Dialer's* Serial port (labeled "Serial RS-232"), then tighten the thumb screws. Next, connect the female end of the Serial cable into the male end of the USB adapter cable. Then connect the rectangular end of the USB cable into your computer's USB port.


- or **B.** Alternative B: If you received a 6' long USB adapter cable (but no Serial cable), connect the male end of the USB adapter cable into the *Speedy Dialer's* Serial port (labeled "Serial RS-232"), then tighten the thumb screws. Then connect the rectangular end of the USB adapter cable into your computer's USB port.

 **Note:** If your computer does not have a USB port, plug the female end of the Serial Cable into your computer's Serial port.

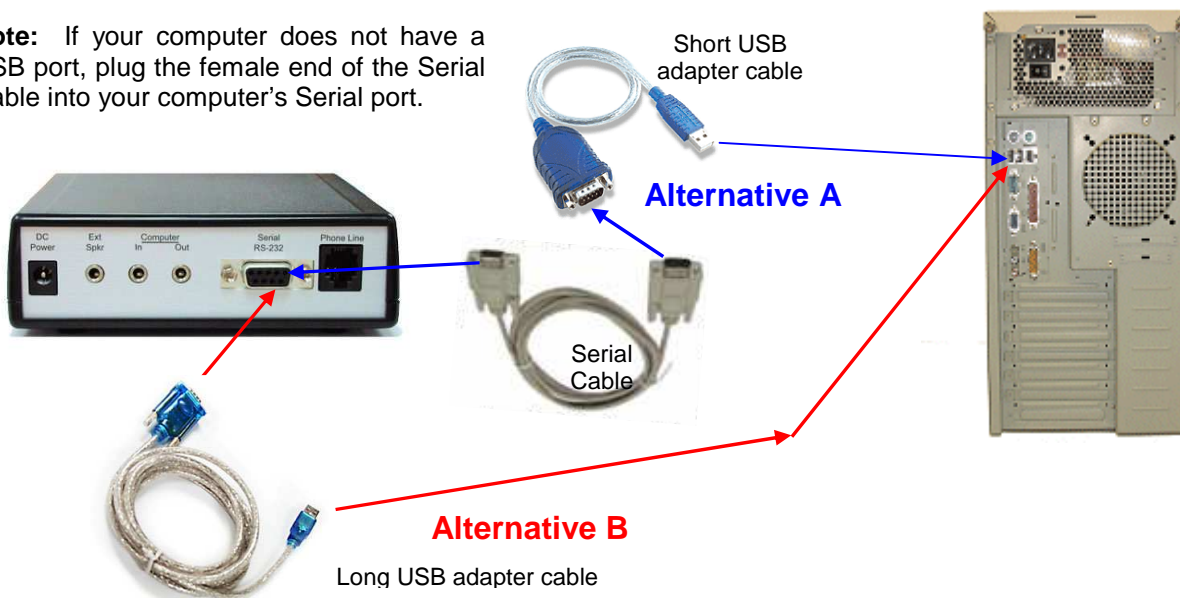

**3: Audio Cables Connection:**

 - A.** On the back of the *Speedy Dialer*, insert the pink plug on one end of the audio cable into the jack labeled “Computer Out” and insert the green plug into the jack labeled “Computer In”.
- B.** On the back of the computer, insert the pink plug on the other end of the audio cable into the sound card jack labeled “Mic” In” (jack may be colored pink) and insert the green plug into the jack for your external speaker (jack may be colored green). (You may have to unplug the existing cable for your external PC speakers. If you wish to continue using the external PC speakers, see “Optional” below.) **Note – some computers have the sound card inputs on the front of the computer instead of the back of the computer.**

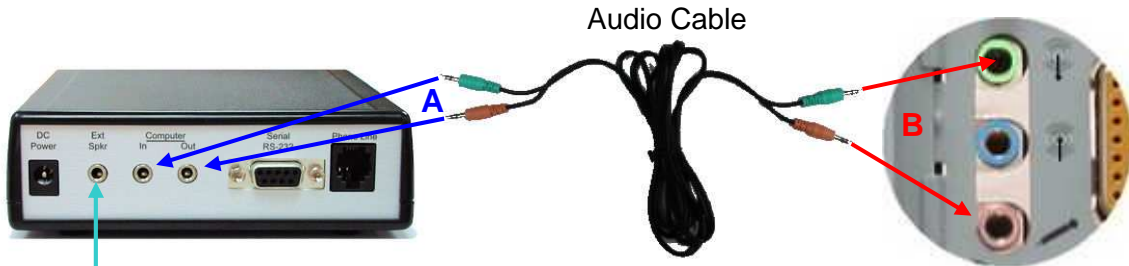


**Optional:** If you wish to continue using your external speakers, plug the cable that you unplugged in step B into the jack labeled “Ext Spkr”, which is located on the back of the *Speedy Dialer*.

Sound Card on Back of Computer  
*(Set sound card playback recording levels to minimum.)*

**4: Power Transformer Connection;**

 - A.** On the back of the *Speedy Dialer*, plug the small round end of the Power Transformer into the jack labeled DC Power.
- B.** Plug the Transformer into a standard electrical wall outlet.

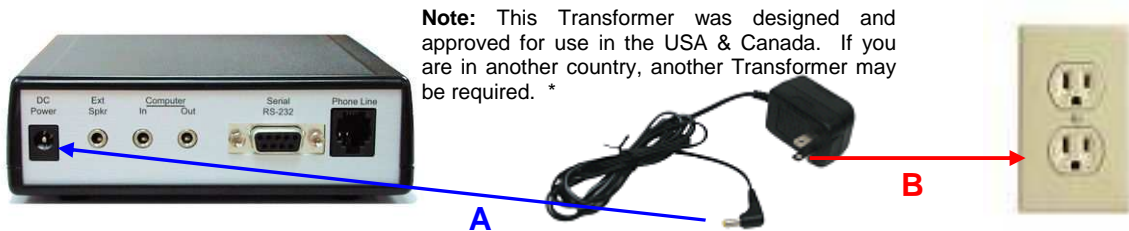

**Note:** This Transformer was designed and approved for use in the USA & Canada. If you are in another country, another Transformer may be required. \*

\* Using the wrong type of transformer may severely damage the *Speedy Dialer*.

**5: Microphone Headset Connection:**

- A.** Insert the Microphone Headset plug with the pink ring (or the microphone icon) into the jack labeled “Mic” on the front of the *Speedy Dialer*.
- B.** Insert the Microphone Headset plug with the black ring (or the headphone icon) into the jack labeled “Spkr”.

